

Ignition Switch


The ignition switch is located directly below the indicator panel.

OFF: All electric circuits open. Engine cannot be started. Remove the key when the ignition switch is OFF.

ON: All electric circuits close. Engine and lights can be operated. Key cannot be removed.

P (PARKING): All electric circuits open except for taillight and position light. Remove the key when parking.

LOCK (STEERING LOCK): See page 30. (U, SA, D)

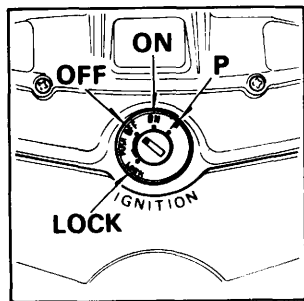

Interruptor del encendido

El interruptor del encendido está situado directamente debajo del tablero de indicadores.

OFF: Todos los circuitos eléctricos están abiertos. No se puede poner el motor en marcha. Quite la llave de contacto cuando el interruptor de encendido esté en posición "OFF".

ON: Todos los circuitos eléctricos están cerrados. El motor y las lámparas pueden funcionar. No se puede retirar la llave.

P (ESTACIONAMIENTO): Todos los circuitos eléctricos están abiertos, excepto el de luz trasera y lámpara indicadora de posición. Quite la llave de contacto al estacionar.

LOCK (BLOQUEO DEL MANUBRIO): Vea pág. 30. (U, SA, D)