


Oil Pressure Warning Light

Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when engine is warm.

CAUTION: Running the engine with insufficient oil pressure will cause serious engine damage.

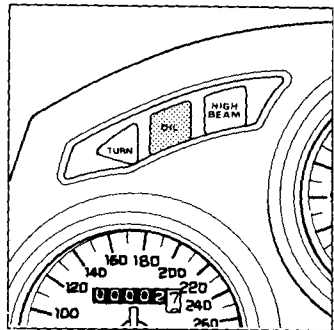

Témoin d'avertissement de pression d'huile

Il s'allume lorsque la pression d'huile moteur est descendue en dessous de la plage de fonctionnement normale. Il doit s'allumer quand on met le contacteur d'allumage sur la position ON (marche) et que le moteur ne tourne pas. Il doit s'éteindre quand le moteur tourne, mais il peut occasionnellement clignoter en régime de ralenti ou près du régime de ralenti, lorsque le moteur est chaud.

PRÉCAUTION: On risque d'endommager gravement le moteur si l'on fait tourner le moteur avec une pression d'huile insuffisante.