


## FUEL AND OIL

### Fuel Cap

Fuel tank capacity is 22.0ℓ (5.8 US gal, 4.8 Imp. gal) including 3.0ℓ (0.8 US gal, 0.7 Imp. gal.) in the reserve supply. To remove the fuel tank cap (1), insert the ignition key (2) and turn it clockwise. The cap will pop up and can be lifted off.

Use low-lead gasoline with an Octane number of 91 or higher. If this is not available, leaded regular gasoline can be used.

To attach the fuel tank cap, align the cap with the filler opening and push down until the lock snaps closed – the cap locks automatically. Remove the key and close the lock cover.

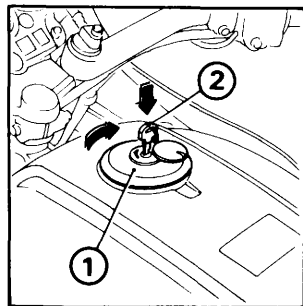

## COMBUSTIBLE Y ACEITE

### Tapa de la boca de suministro del combustible

La capacidad del tanque de combustible es de 22 litros, incluyendo 3 litros de reserva. Para quitar la tapa del tanque de combustible (1), insertar la llave de contacto (2) y girarla en el sentido de las agujas del reloj. La tapa saltará y podrá quitarse. Utilice gasolina de poco tenor de plomo con el índice octánico de 91 o superior. Si esta gasolina no está disponible, se puede utilizar gasolina emplomada corriente.

Para poner la tapa del tanque de combustible, alinearla con la abertura de la boca de llenado y empujarla hacia abajo hasta que quede trabada – la tapa cierra automáticamente. Quitar la llave de contacto y cerrar la cubierta.