


Fuel Valve

Manual Fuel Valve

The manual fuel valve (1) is under the left side of the fuel tank. Set it to ON for normal operation or RES when you start to run out of the main fuel supply. The OFF setting is only for long term storage or servicing of fuel system components.

Automatic Fuel ON-OFF

With the fuel valve set to ON (or RES) fuel flows to the carburetors only when the engine is being started or is running. A diaphragm shuts off fuel flow when the engine is turned off.

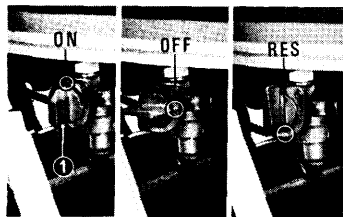

(1) Fuel valve in normal operating position

Válvula de paso de combustible

Válvula manual de paso de combustible

La válvula manual de paso de combustible (1) está ubicada debajo del lateral izquierdo del depósito de combustible. Colocarla en la posición “ON” para la operación normal, y en la posición “RES” cuando se enciende la luz de reserva. La posición “OFF” se usa solamente para largos períodos de almacenamiento o para reparar el sistema de alimentación de combustible de la motocicleta.

Alimentación automática de combustible (alimentación y corte)

Cuando la válvula está colocada en la posición “ON” (o “RES”), el combustible pasará a los carburadores solamente cuando el motor esté en marcha o sea arrancado. Un diafragma cierra el paso del combustible cuando el motor está parado.

(1) Válvula de paso del combustible en la posición normal de conducción.