


Ignition Switch

The ignition switch is located between the instruments.

OFF: All electric circuits open. Engine cannot be started. Key can be removed.

ON: All electric circuits closed. Engine and light can be operated. Key cannot be removed.

P (PARKING): All electric circuits open except for tailight. Key can be removed.

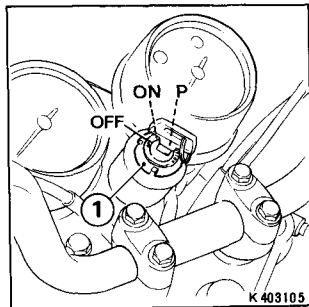

Interruptor del encendido

El interruptor del encendido está situado dentro de los instrumentos.

OFF: Todos los circuitos eléctricos están abiertos. No se puede poner el motor en marcha. Se puede retirar la llave.

ON: Todos los circuitos eléctricos están cerrados. El motor y las lámparas pueden funcionar. No se puede retirar la llave.

P (ESTACIONAMIENTO): Todos los circuitos eléctricos están cerrados, excepto el de las lámparas traseras. Se puede retirar la llave.