


Oil change and oil filter cleaning:

Drain the oil while engine is still warm.

1. Remove the oil filler cap.
2. Place an empty oil drain pan under the engine and then remove the oil drain plug (1).
3. Operate the kick starter several times to aid in complete draining of the remaining oil.
4. Reinstall the plug (1), making sure that the O-ring is in good condition.
5. Remove the foot rest, rear brake pedal, muffler, kick starter and right crankcase cover.

CAUTION: Change oil more frequently than recommended on page 109, depending upon the severity of dust conditions.

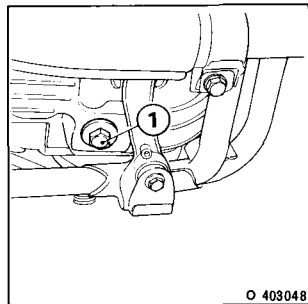

Cambio de aceite y limpieza del filtro de aceite:

Drene el aceite mientras que el motor esté todavía caliente.

1. Quite la tapa de la boca de llenado de aceite.
2. Coloque un receptáculo vacío debajo del cárter de aceite y, luego, quite el tapón de drenaje de aceite (1).
3. Haga jugar el pedal del kickstarter varias veces para purgar completamente el resto de aceite.
4. Remonte el tapón (1), asegurándose de que la junta anular está en buen estado.
5. Quite el descansapié, pedal del freno trasero, silenciador, kickstarter y cubierta del cárter motor del lado derecho.

ATENCIÓN: Cambie el aceite más frecuentemente que lo recomendado en pág. 109, cuando se maneja la moto en condiciones más severas de polvo.