


### Cam Chain Adjustment

1. Remove the generator cover and four tappet adjusting hole caps.
2. Turn the generator rotor counterclockwise until the four tappets are free.
3. Loosen the tensioner lock nut (1) and tensioner bolt (2). When these are loosened, the cam chain tensioner will automatically position itself to provide the correct cam chain tension.
4. Retighten the tensioner bolt and lock nut.

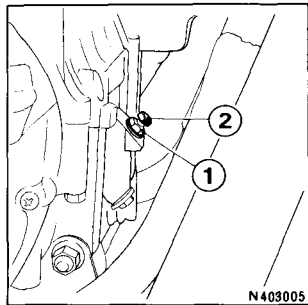

---

### Ajuste de la cadena de levas

1. Desmonte la cubierta del generador y las cuatro tapas del orificio de ajuste de taqués.
2. Haga girar el rotor del generador en el sentido inverso del movimiento de las manecillas del reloj hasta que los cuatro taqués estarán libres.
3. Afloje la contra-tuerca del tensor (1) y el tornillo del tensor (2). Cuando están todos aflojados, el tensor de la cadena de levas estará automáticamente colocado en la posición que permite proporcionar la óptima tensión de la cadena de levas.
4. Re-apriete el tornillo de tensor y la contra-tuerca.