


Drive Chain

Drive chain adjustment:

Monthly, check the drive chain tension; also for harshness of operation from neglected lubrication.

1. Place the motorcycle on a support block to raise the rear wheel off the ground. Shift the transmission into neutral.
2. Move the chain (1) up and down with your fingers at a point midway between the sprockets. Adjust slack so that it is approx. 15—25 mm (5/8-in)

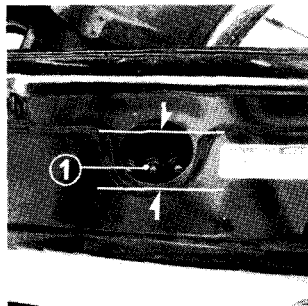

Cadena de transmisión

Ajuste de la cadena de transmisión

Verificar la tensión de la cadena de transmisión mensualmente; de forma igual, la dureza de operación debido a la lubricación descuidada.

1. Coloque la moto sobre un bloque de soporte para levantar la rueda trasera sobre el suelo. Coloque la palanca de mando de transmisión en la posición de punto muerto.
2. Empuje la cadena (1) hacia arriba y hacia abajo con los dedos por un punto medio de las dos catalinas. Ajuste la flecha de modo que ésta se haga 15—25 mm aproximadamente.

