

### Headlight Dimmer Switch (3)

Select HI for high beam, LO for low beam.

### Turn Signal Switch (4) (CT185: Optional part)


Move to L to signal a left turn, R to signal a right turn. Return to the center (off) when finished.

### Horn Switch (5)

Press the button to sound the horn.

### Starter Button (6)

The starter button (6) operates the starter. When you press in the button, the starter cranks the engine.

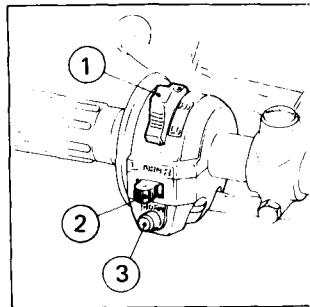

(CT 185)

### Conmutador de haces del faro delantero (3)

Seleccionar HI para la luz larga y LO para la corta.

### Interruptor de señales de cruce (4) (CT185: Pieza opcional)

Mover el interruptor hacia la señal L para indicar un giro a la izquierda y hacia la señal R para indicar un giro a la derecha.

Cuando se acabe de indicar los giros poner el interruptor en la posición "OFF".

### Interruptor de bocina (5)

Presionar este botón para hacer sonar la bocina.

### Bóton de arranque (6)

Este botón de arranque (6) hace funcionar el arrancador. Oprima este botón y el arrancador arrancará.

