


Gearshift Pedal: (CT 200)

The gearshift pedal (A) is near the left footpeg. One full stroke of the gearshift pedal will shift the transmission. The pedal automatically returns to the horizontal position when released. Each stroke of the pedal engages the next gear in sequence.

Depress the front of the pedal to up shift to a higher gear, and the rear to downshift.

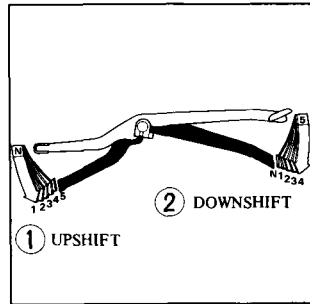

Pedal de cambio de velocidad: (CT200)

El pedal de cambio de velocidad (A) está cerca del apoyapiés izquierdo. Una carrera completa del pedal de cambio hará que cambie la velocidad. El pedal vuelve automáticamente a la posición horizontal una vez que se le libera. Cada carrera del pedal hace que cambie, en orden, la velocidad.

Pisar la parte delantera del pedal para cambiar a una marcha superior, y la parte posterior para reducir.

1. Cambio a una marcha superior
2. Reducción de marcha