


Drive chain lubrication:

1. Remove the chain case and carefully remove the master link retaining clip (1) with pliers. Remove the drive chain by removing the master link.
2. Clean the drive chain in solvent and allow to dry.
3. *Inspect the chain for wear (sloppy joints), stiffness and binding at the joints, and broken or separated rollers. If damaged or worn, the chain should be replaced.*
4. Lubricate the drive chain by applying a liberal amount of good engine oil or chain lubricants.
5. Reinstall and adjust the drive chain.

NOTE: Install the retaining clip so that the closed end of the clip (1) is in the normal direction of rotation.

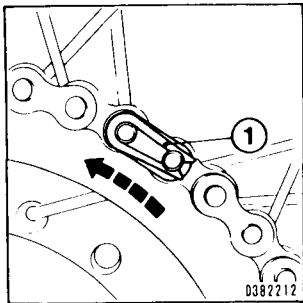

Lubrificación de la cadena de transmisión:

1. Quite la guía de la cadena y desarme cuidadosamente el clip que retiene el eslabón de cadena principal (1) con alicates. Desarme la cadena de transmisión quitando el eslabón de cadena principal.
2. Lave la cadena de transmisión en una solución y déjela secar.
3. Verifique el estado de desgaste de la cadena (las juntas aflojadas), rigidez y adhesión en las juntas y los rolletes rotos o desunidos.
Si la cadena está dañada o desgastada más allá del límite, deberá reemplazarse por una nueva.
4. Lubrifique cadena de transmisión aplicando una cantidad libre del aceite para motor o del lubricante de cadena de alta calidad.
5. Remonte y ajuste la cadena de transmisión.

NOTA: Fije el clip de retención de modo que la extremidad cerrada del clipe (1) sea in la dirección normal de rotación.