

FUEL AND OIL


Fuel cap

Fuel tank capacity is 19 liters (5.0 US gal., 4.2 Imp. gal).

To remove the fuel tank cap (1), insert the ignition key (2) and turn it clockwise. The cap will pop up and can be lifted off. Use low-lead gasoline with an Octane number of 91 or higher.

To attach the fuel tank cap, align the latch in the cap with the slot in the filler neck.

Push the cap into the filler neck until it snaps closed and locks. Remove the key and close the lock cover.

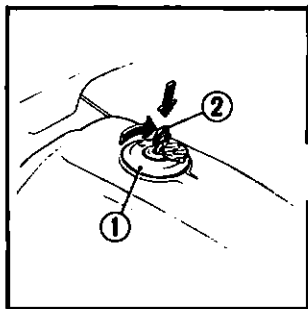

COMBUSTIBLE Y ACEITE

Tapa de la boca de suministro del combustible

La capacidad del tanque de combustible es de 19 litros.

Para quitar la tapa del tanque de combustible (1), insertar la llave de contacto (2) y girarla en el sentido de las agujas del reloj. La tapa saltará y podrá quitarse. Utilice gasolina de poco tenor de plomo con el índice octánico de 91 o superior.

Para poner el tapón del tanque de combustible, alinear el pestillo en el tapón con la ranura en el cuello de llenado.

Presionar el tapón en el cuello de llenado hasta que quede cerrado y trabado.

Quitar la llave y cerrar la cubierta.