


Ignition Switch

The ignition switch is located directly below the indicator panel.
OFF: All electric circuits open. Engine cannot be started. Key can be removed.

ON: All electric circuits close. Engine and lights can be operated. Key cannot be removed.

P (PARKING): All electric circuits open except for taillight and position light. Key can be removed.

LOCK (STEERING LOCK): E, F, IT, U, SA and D types. See page 60.

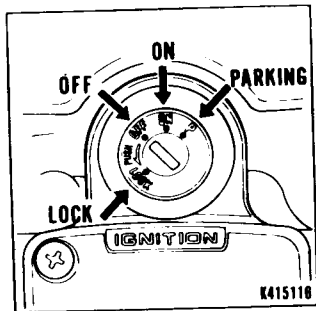

Interruptor del encendido

El interruptor del encendido está situado directamente debajo del tablero de indicadores.

OFF: Todos los circuitos eléctricos están abiertos. No se puede poner el motor en marcha. Se puede retirar la llave.

ON: Todos los circuitos eléctricos están cerrados. El motor y las lámparas pueden funcionar. No se puede retirar la llave.

P (ESTACIONAMIENTO): Todos los circuitos eléctricos están abiertos, excepto el de luz trasera y lámpara para indicadora de posición. Se puede retirar la llave.

LOCK (BLOQUEO DEL MANUBRIO): Para el tipos E, F, IT, U, SA y D. Vea pág. 60.