


## Headlight bulb replacement

You can replace the headlight bulb with your tool kit.

Remove the screws (1) holding the bonnet in place and then remove the screws (2) holding the cover below the headlight. Bring the bonnet forward and remove the bolts (3) securing the headlight. Next, remove the bolts (4) securing the headlight below. Remove the headlight and take off the rubber (5) protecting the bulb. Now replace the headlight bulb (6).

**NOTE:** Take care with the mounting direction of the rubber (5) when re-assembling. The part with the water-draining hole (7) is placed face-down.

**CAUTION:** Keep your fingers away the bulb surface, when installing a new bulb.

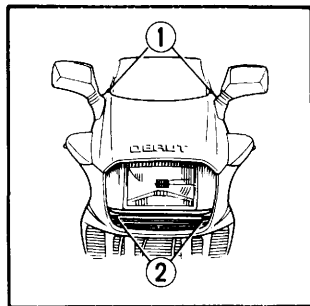

## Reemplazo de la bombilla del faro

Usted puede reemplazar la bombilla del faro usando el juego de herramientas.

Extraer los tornillos (1) que sostienen la cubierta en su lugar y extraer los tornillos (2) que sostienen la cubierta por debajo del faro. Tirar de la cubierta hacia adelante y extraer los tornillos (3) que sujetan al faro por debajo. Extraer el faro y quitar el caucho (5) que protege a la bombilla. Ahora cambiar la bombilla (6) del faro.

**NOTA:** Tener cuidado de la dirección de montaje del caucho (5) cuando se vuelva a efectuar el montaje. La pared con el agujero para drenaje de agua (7) deberá colocarse hacia abajo.

**PRECAUCION:** No ponga sus dedos sobre la superficie de la bombilla cuando instale una bombilla nueva.

