


## Air Cleaner Servicing

The air cleaner should be serviced at regular intervals (page 159.)  
When riding in dusty areas, more frequent service may be necessary.

1. Remove right side cover.
2. Turn the air cleaner cover (1) counterclockwise and remove it.
3. Take out the air cleaner element (2).
4. Clean the air cleaner element using compressed air from the outside, or replace it if necessary.
5. Reinstall the air cleaner parts in the reverse order of removal.

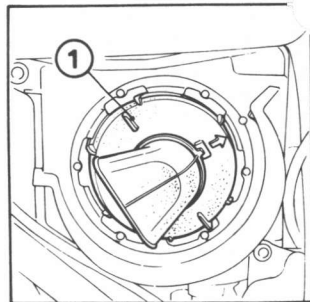

## Filtro del aire

El filtro del aire deberá revisarse a intervalos regulares (página 159).  
Cuando se conduzca en lugares con mucho polvo, será necesario efectuar revisiones más frecuentes.

1. Quitar la cubierta del lado derecho (1).
2. Girar la cubierta del filtro de aire (2) hacia la derecha y quitarla.
3. Sacar el elemento del filtro de aire (3).
4. Limpiar el elemento del filtro de aire con aire comprimido aplicado desde el exterior, o cambiarlo si fuese necesario.
5. Volver a instalar las piezas del filtro de aire siguiendo el orden inverso al del desmontaje.

