


Throttle Operation

CAUTION: Take your motorcycle to your nearest Honda Dealer and have the oil pump inspected for synchronization whenever you adjust the throttle grip free play. Severe engine damage may result if the oil pump is not synchronized properly.

1. Check for smooth rotation of the throttle grip from the fully open to the fully closed position at both full steering positions.
2. Check the throttle grip play at the grip. Standard play is approx. 2–6 mm (0.08–0.24 in.) of the grip rotation. To adjust the play, loosen the lock nut (1) and turn the adjuster (2).

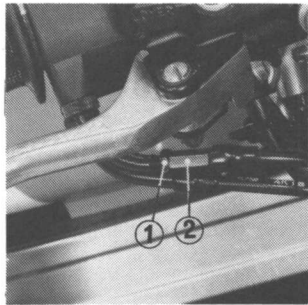

Fonctionnement de la poignée des gaz

PRÉCAUTION:

Confier votre motocyclette au Concessionnaire Honda le plus proche et faire inspecter la synchronisation de la pompe à huile après un réglage de la garde à la poignée des gaz. De sérieux dommages du moteur peuvent être provoqués si la pompe à huile n'est pas correctement synchronisée.

1. Vérifier la bonne rotation de la poignée des gaz de la position de pleine ouverture à celle de fermeture complète, aux deux positions extrêmes de la direction.
2. Vérifier le jeu de la poignée des gaz. Le jeu standard est de 2–6 mm environ d'un tour de la poignée. Pour régler le jeu, desserrer le contre-écrou (1) et faire tourner le réglage (2).