


## Clutch

This motorcycle has a hydraulic clutch. There are no adjustments to perform but the clutch system must be inspected periodically for fluid level and leakage. If the control lever freeplay becomes excessive and the motorcycle creeps or stalls when shifted into gear or if the clutch slips, there is probably air in the clutch system and it must be bled out. See your Honda dealer for this service.

### Fluid level:

Check that the fluid level is upper the lower level mark (1). If the fluid level is near the lower level mark, it indicates the fluid is leakage. See your authorized Honda dealer for repairment.

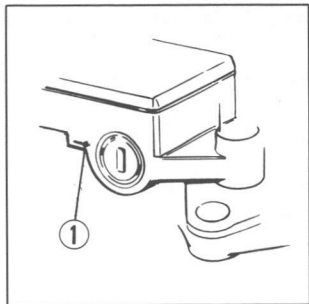

---

## Embrayage

Cette machine est dotée d'un embrayage hydraulique. Cet embrayage ne nécessite pas de réglage mais il est nécessaire de faire régulièrement le plein et de vérifier s'il n'y a pas de fuite. Si le jeu du levier de sélection est trop important et que le moteur broute ou cale lorsqu'une vitesse est engagée ou si l'embrayage patine, c'est probablement qu'il y a de l'air dans le circuit d'embrayage. Demander à un revendeur Honda d'effectuer la purge.

### Niveau de liquido:

S'assurer que le niveau de liquide de frein se trouve au-dessus du marque de niveau inférieur (1). S'il se trouve près du marque de niveau inférieur, cela signifie qu'il y a des fuites de liquide. S'adresser au concessionnaire Honda pour la réparation.