


### Inspection:

Check the coolant level in the reserve tank (1) when the engine is at normal operating temperature. If the level is below the UPPER mark (2), top-up with coolant. If there is no coolant in the reserve tank, check for leaks and repair as necessary.

### Coolant change:

**WARNING: Do not perform this operation while the engine is hot.**

1. Remove the seat and left side cover.
2. Take out the reserve tank from the bracket and drain the coolant from it through the filler cap opening.

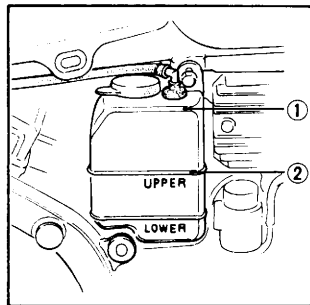

---

### Inspection:

Vérifier le niveau du liquide de refroidissement du réservoir auxiliaire (1) lorsque le moteur est à la température normale de fonctionnement. Si le niveau est plus bas que le repère UPPER (2), faire le plein de liquide. S'il n'y a point de liquide dans le réservoir auxiliaire, vérifier pour détecter la fuite et la réparer s'il est nécessaire.

### Remplacement du liquide refroidissement:

**ATTENTION: Ne pas effectuer cette opération lorsque le moteur est chaud.**

1. Déposer la selle et le cache latéral gauche.
2. Déposer le réservoir auxiliaire du support et vidanger le liquide de refroidissement du réservoir à travers l'ouverture du bouchon.