


Air Cleaner Servicing

The air cleaner should be serviced at regular intervals (Page 88). When riding in dusty areas, more frequent service may be necessary.

1. Remove the lower cowling (Page 106).
2. Turn the fuel valve OFF. (2)
3. Remove the seat and fuel tank mounting bolt (3).
4. Remove the bolt attaching the fuel valve and disconnect the fuel line and vacuum tube from the carburetor.

NOTE:

- * Do not remove the fuel line between the fuel valve (2) and fuel tank (1). Failure to do so causes the gasoline to flow out of the fuel tank.

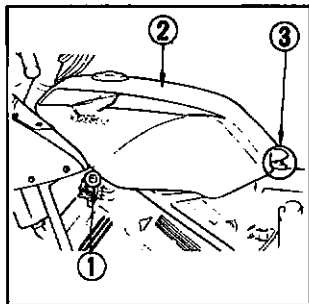

Entretien du filtre à air

Le filtre à air doit être entretenu à intervalles réguliers (page 88). Un entretien plus fréquent sera nécessaire si la conduite se fait surtout en régions poussiéreuses.

1. Retirer le capotage inférieur (Page 106).
2. Amener le robinet à carburant à la position OFF (2).
3. Déposer le siège et le boulon de fixation du réservoir à carburant (3).
4. Déposer le boulon de fixation du robinet à carburant et déconnecter la conduite de carburant et le tube à dépression au niveau du carburateur.

NOTE:

- * Ne pas enlever la conduite entre le robinet (2) et le réservoir à carburant (1) car l'essence s'écoulerait de ce dernier.