


## Air Cleaner Servicing

1. Remove the right side cover.
2. Remove the air cleaner cover (4) by removing the rectifier (1), band (2) and screws (3).  
Remove the air cleaner element (5).
3. Wash the air cleaner element (5) in clean solvent and allow to dry thoroughly.
4. Soak the air cleaner element in clean gear oil (SAE80-SAE90) until saturated, then squeeze out excess oil.
5. Reinstall the air cleaner and side cover.

**WARNING: Gasoline or low flash point solvents are highly flammable and must not be used to clean the element.**

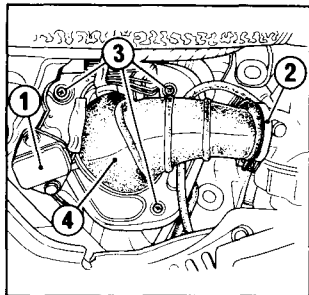

## Mantenimiento del filtro de aire

1. Quite la cubierta del lado derecho.
2. Quite la cubierta del filtro de aire (4) desmontando el rectificador (1), banda (2) y tornillos (3).  
Retire el elemento del filtro de aire (5).
3. Lavel el elemento del filtro de aire (5) en una solución limpia y déjelo secar completamente.
4. Bañe el elemento del filtro de aire en el aceite de engranaje (SAE80-SAE90) limpio hasta que sature. Luego, exprímalo para purgar el exceso del aceite.
5. Remonte el filtro de aire y la cubierta lateral.

**PRECAUCION: La gasolina y otras soluciones de bajo punto de inflamabilidad no son propias para utilizarse para lavar el elemento, porque son demasiado inflamables y aun, a veces, explosivas.**

