


Ignition Switch

The ignition switch (1) is on the right side of the speedometer.

Key Position	Function	Key Removal
LOCK (steering lock)	Steering is locked. Engine and lights cannot be operated.	Remove the key
OFF	Engine and lights cannot be operated.	Remove the key Key cannot be removed--G
ON (red dot)	Taillight and instrument lights will be on and the other lights can be operated. The engine can be started.	Key cannot be removed.

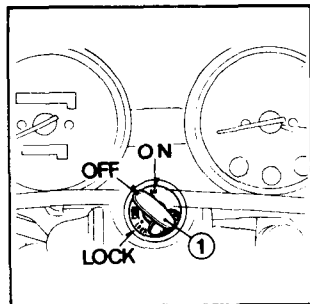

Interruptor de encendido

El interruptor de encendido (1) está en el lado derecho del velocímetro.

Posición de la llave	Función	Extracción de la llave
LOCK (dirección trabada)	La dirección queda trabada y el motor y las luces no funcionan.	Quitar la llave.
OFF (apagado)	El motor y las luces no funcionan.	Quitar la llave. La llave no pueda quitarse... G
ON (en el punto rojo) (encendido)	Las luces de los instrumentos y luz de cola se encenderán mientras que otras podrán hacerse funcionar. El motor también podrá arrancarse.	La llave no pueda quitarse;