


## FUEL AND OIL

### Fuel Tank

The fuel tank holds 8.0 liters (2.1 U.S. gal., 1.8 Imp. gal.) including the 1.4 liters (0.37 U.S. gal., 0.31 Imp. gal.) in the reserve supply. To open the fuel cap (1), pull off the breather tube (2) from the steering stem nut and turn the cap (1) counterclockwise. Use low-lead gasoline with an octane number of 91 or higher. If this is not available, leaded regular gasoline can be used.

After refueling, be sure to tighten the fuel tank cap firmly by turning clockwise until the arrow (3) on the cap faces forward. Insert the breather tube into the steering stem nut.

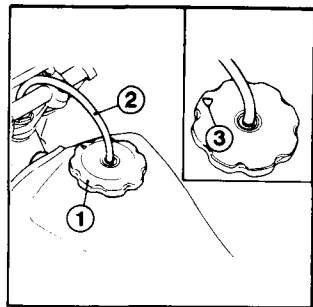

## COMBUSTIBLE Y ACEITE

### Depósito de combustible

La capacidad del depósito de combustible es de 8,0 litros, incluyendo 1,4 litros en la reserva. Para abrir la tapa del combustible (1), hale el tubo del respiradero (2) de la tuerca de la varilla de dirección y gire la tapa (1) a la izquierda. Utilice gasolina de poco tenor de plomo con el índice octánico de 91 o superior. Si tal gasolina no está disponible, se puede utilizar gasolina normal emplomada.

Después de repostar, cerciorarse de apretar firmemente la tapa del depósito de combustible girándola hacia la derecha hasta que la flecha (3) en el tapón indique hacia adelante. Insertar el tubo de respiración en la tuerca del vástago de dirección.