


Air Cleaner

The air cleaner should be serviced at regular intervals (page 92). When riding in dusty areas, more frequent service may be necessary.

1. Remove the left side cover.
2. Remove the air cleaner cover screws (1) and the cover (2).
3. Remove the wing nut (3) and remove the air cleaner element (4).
4. Wash the element in non-flammable or high flash point solvent and let it dry thoroughly.

WARNING: Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.

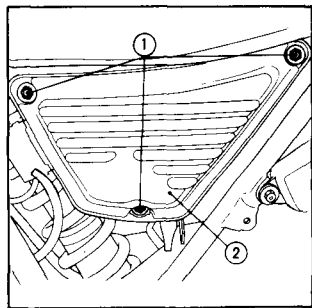

Filtro de aire

El filtro de aire deberá revisarse a intervalos regulares (página 94). Cuando se conduzca en áreas muy polvorientas, será necesario revisarlo más frecuentemente.

1. Quitar la cubierta lateral izquierda.
2. Quitar los tornillos de la cubierta del filtro de aire (1) y la cubierta (2).
3. Quitar la tuerca de mariposa (3) y el elemento del filtro de aire (4).
4. Lavar el elemento en disolvente que no sea inflamable, o que tenga un alto punto de inflamación, y dejar que se seque por completo.

ATENCIÓN: Nunca utilizar gasolina o disolventes de bajo punto de inflamabilidad para limpiar el elemento del filtro de aire ya que podría ocurrir un incendio o una explosión.

