


Drive chain adjustment:

To adjust the drive chain:

1. Loosen the rear axle nut (1).
2. Turn both right and left adjusters (2) equally to increase or decrease chain slack.
3. After adjusting to the specified chain slack, be sure the same adjuster index marks (3) align with the stopper pins (4) on both sides of the swingarm.
4. Check the chain wear label when adjusting the chain. If the red zone on the chain adjuster label aligns with the center of the stopper pin after the chain has been adjusted to 30–40 mm (1-1/4–1-5/8 in) slack, the chain is excessively worn and must be replaced.

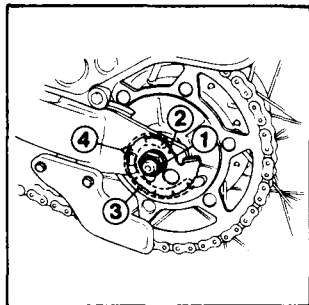

Ajuste de la cadena de transmisión:

Para ajustar la cadena de transmisión:

1. Aflojar la tuerca del eje trasero (1).
2. Girar igualmente los reguladores izquierdo y derecho para aumentar o disminuir la tensión de la cadena.
3. Después de ajustar la tensión de la cadena, cerciorarse de que las marcas de referencia de los reguladores (3) se alinien con los pasadores de retención (4) a ambos lados del brazo oscilante.
4. Cuando se ajuste la cadena, comprobar su etiqueta de desgaste. Si la zona roja de la etiqueta del regulador de la cadena se alinea con el centro del pasador de retención, después de haber ajustado la flojedad de la cadena (30–40 mm), la cadena está excesivamente desgastada y debe cambiarse.

