


Installation Notes:

- Reverse the removal procedure.
- Insert the axle through the wheel hub and left fork leg.
Make sure that the tang (5) on the fork leg is located in the slot (6) in the brake panel (7).
Tighten the front axle.
Front axle torque: 50–80 N·m (5.0–8.0 kg·m, 36–38 ft·lbs)
- Check the brake adjustment.
- Apply the brake several times and check for free wheel rotation when released.

WARNING: If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.

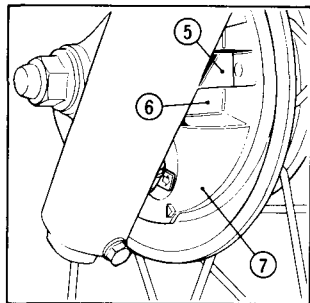

Notas sobre la instalación

- Invertir el procedimiento de desmontaje.
- Insertar el eje a través del cubo de la rueda y de la pata izquierda de la horquilla.
Cerciorarse de que la lengüeta (5) en la pata de la horquilla esté situada en la ranura (6) del panel del freno (7).
Apretar el eje delantero.
Par de torsión del eje delantero: 50–80 N·m (5–8 kg·m)
- Comprobar el ajuste del freno.
- Aplicar el freno varias veces y comprobar si la rueda gira libremente al soltarlo.

ATENCIÓN: Si no se utilizó una llave dinamométrica para la instalación, póngase en contacto con su distribuidor para verificar el montaje apropiado.