


## Ignition Switch

The ignition switch (1) is in the indicator panel.

Key Position	Function	Key Removal
LOCK (steering lock)	Steering is locked. Engine and lights cannot be operated.	Remove the key
OFF	Engine and lights cannot be operated.	Remove the key. Key cannot be removed (SD only).
ON	The lights can be operated. The engine can be started.	Key cannot be removed.

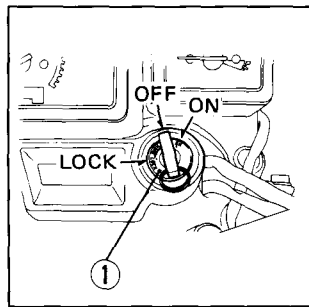

## Interrupteur d'allumage

L'interrupteur d'allumage (1) se trouve sur le tableau de témoins.

Position de la clé	Fonction	Retrait de la clé
LOCK (antivol de direction)	La direction est bloquée. Le moteur et les dispositifs d'éclairage ne peuvent être commandés.	Retirer la clé.
"OFF" (Arrêt)	Le moteur ne peut fonctionner et les feux et lampes ne s'allument pas.	Retirer la clé. La clé ne peut être retirée (SD seulement).
"ON" (Marche)	Les feux peuvent également être allumés. Le moteur peut être mis en marche.	La clé ne peut être retirée.