IDLE SPEED

Refer to the Safety Precautions on page 44.

Idle Speed:

The engine must be at normal operating temperature for accurate idle speed adjustment. Ten minutes of stop-and-go riding is sufficient.

Do not attempt to compensate for faults in other systems by adjusting idle speed. See your Honda dealer for regularly scheduled carburetor adjustments.

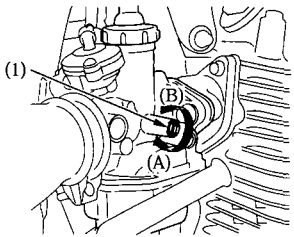

(1) Throttle stop screw (A) Increase (B) Decrease

1. Warm up the engine and hold the motorcycle upright.
2. Connect a tachometer to the engine.
3. Adjust idle speed with the throttle stop screw (1).

   Idle speed (In neutral):

   1,400 ± 100 min^{-1} (rpm)