


Remove the stopper ring.  
Loosen the handlebar pinch bolt and remove the handlebar from the fork.

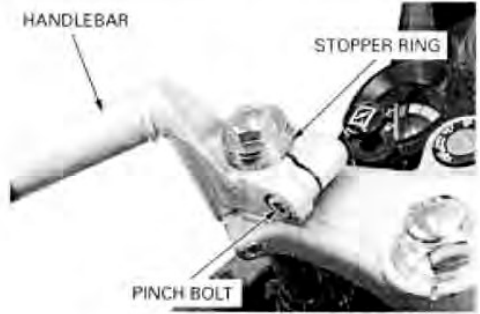

**INSTALLATION**

Install the handlebar onto the fork and align the boss on the handle bar with the cut-out on the top bridge.




Tighten the handlebar pinch bolt to the specified torque.

**TORQUE: 27 N·m (2.8 kgf·m, 20 lbf·ft)**

Install the stopper ring into the groove on the fork pipe.

Install the right handlebar in the same manner as for the left handlebar.

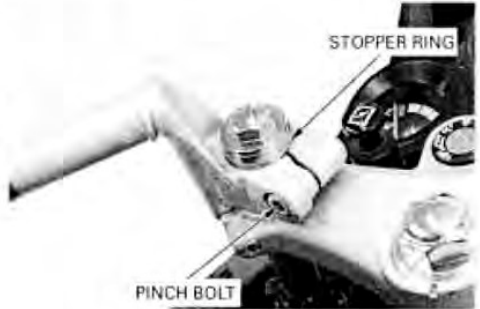

If the left handlebar grips were removed, apply Honda Bond A or its equivalent to the inside surface of the grip and to the clean surface of the left handlebar. Wait 3 – 5 minutes and install the grip. Rotate the grip for even application of the adhesive.

**NOTE:**

Allow the adhesive to dry for an hour before using.

