


HEADLIGHT AIM VERTICAL ADJUSTMENT


Vertical adjustment can be made by turning the screws (1) and (2) in or out as necessary.

Obey local laws and regulations.

For ED:

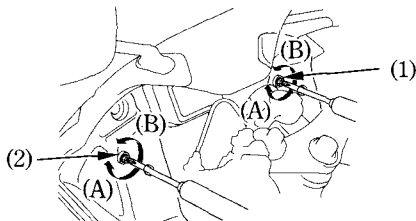

For E,EK,U:

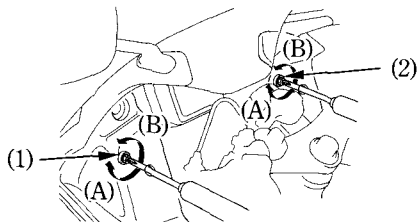

(1) Screw (low beam)

(A) Up

(2) Screw (high beam)

(B) Down