

Bleeding the brake system:

The brakes must be bled with great care subsequent to work performed on the brake system, when the lever or pedal becomes soft or spongy, or when lever or pedal travel is excessive.

For the front brake, the bleeding operation must be performed on each side.



The procedure is best performed by two mechanics.

a. Remove the dust cap from the bleeder valve and attach a bleeder hose 1.

b. Place the free end of the bleeder hose into a glass container which has some hydraulic brake fluid in it so that the end of the hose can be submerged.

c. Fill the reservoir using only the recommended brake fluid. Screw the cap partially on the reservoir to prevent entry of dust.

d. Pump the brake lever or pedal several times until pressure can be felt. Hold the lever or pedal tight, open the bleeder

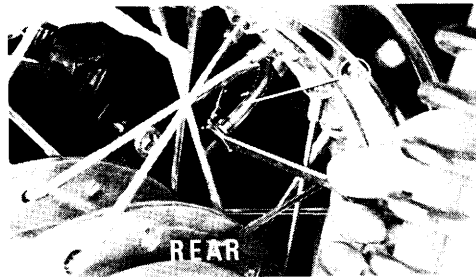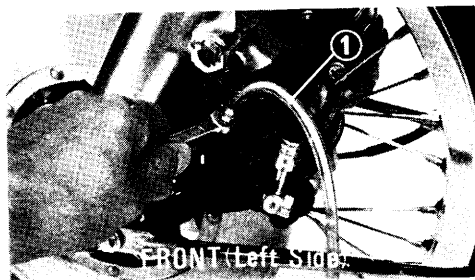

1. Bleeder hose