


4. Remove clips B (8), bolt A (9) and bolts B (10) and pull out the right under cowl (11).

- Carefully pull out the right under cowl from around the rear brake pedal (12) by moving it as shown in the illustration.

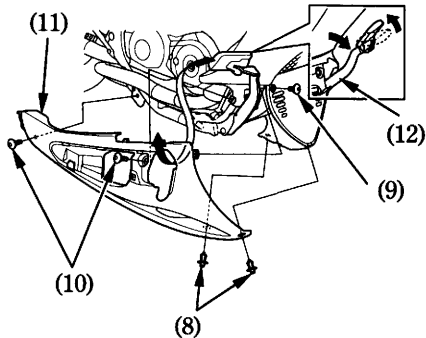

(8) Clips B
(9) Bolt A
(10) Bolts B

(11) Right under cowl
(12) Rear brake pedal

Installation:

- Installation can be done in the reverse order of removal.
- Carefully route the rear brake pedal through the opening of the right under cowl.
- If either of the rubber caps came away from the prongs when removing the muffler cover, re-attach them.
- Position the muffler cover so the prongs are aligned with the hooks.
- Install the bolts and tighten to the specified torque:
step board mounting bolts:
26 N·m (2.7 kgf·m , 19 lbf·ft)
muffler cover bolt:
9 N·m (0.9 kgf·m , 6.6 lbf·ft)