


4. Insert the pin spanner (4) in the extension bar (5) provided in the tool kit (page 91 ).
5. Raise the front of the fuel tank (6) and install the bolt (1) to frame body.

Do not raise the fuel tank higher than the stopper cable (7) allows.

6. Place the base of the extension bar over the installed bolt and position the pin spanner so that it supports the fuel tank.

When raising the fuel tank, be careful not to allow the collars fall down.

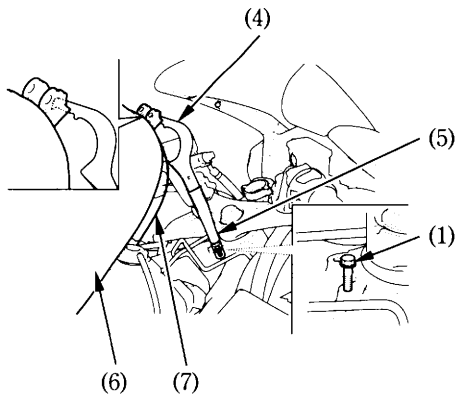

- |                   |                   |
|-------------------|-------------------|
| (1) Bolt          | (6) Fuel tank     |
| (4) Pin spanner   | (7) Stopper cable |
| (5) Extension bar |                   |