


Place the rear wheel into the swingarm.  
Install the drive chain over the driven sprocket.  
Install the axle from the left side.




Install the washer and loosely install the axle nut.  
Adjust the drive chain slack (page 3-20).  
Tighten the axle nut to the specified torque.

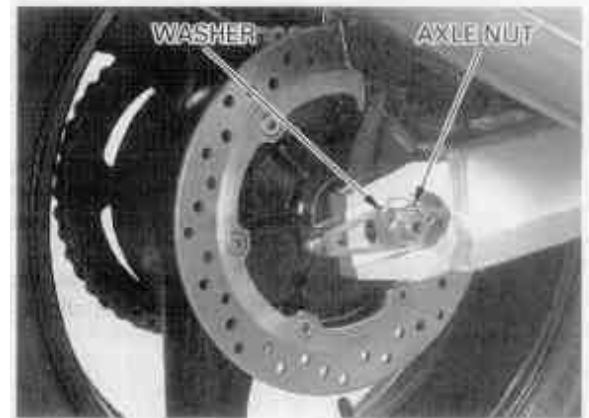

**TORQUE:** 93 N·m (9.5 kgf·m , 69 lbf·ft)

*SD type only:* Install the mud guard onto the rear fender, install the collars, screws and nuts.  
Hold the screw and tighten the nut securely.

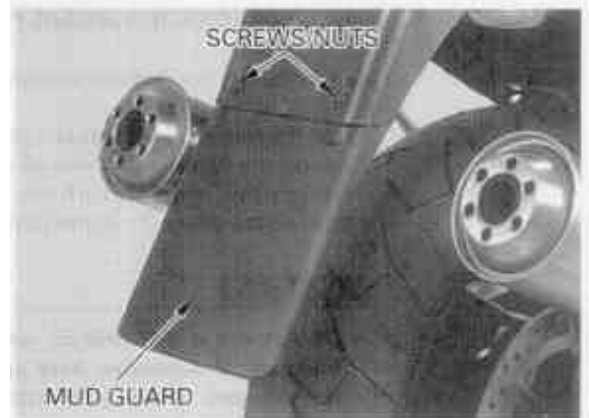

## SHOCK ABSORBER

### REMOVAL

Place the motorcycle on its center stand.

Remove the following:  
– Seat (page 2-2)  
– Fuel tank (page 5-52)

Remove the shock absorber lower mounting bolt/nut.

