

## IDLE SPEED


Refer to the Safety Precautions on page 97 .

The engine must be at normal operating temperature for accurate idle speed adjustment. Ten minutes of stop-and-go riding is sufficient.

1. Remove the mounting bolts (1) and cover (2).
2. Warm up the engine, and shift to neutral, and place the motorcycle on its side stand.
3. Adjust idle speed with the throttle stop screw (3).

Idle speed (In neutral):

$1,000 \pm 100 \text{ min}^{-1} (\text{rpm})$

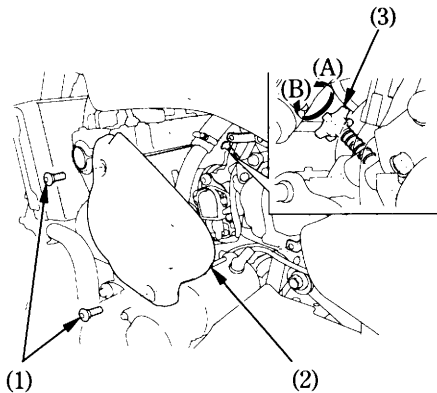

(1) Bolts  
(2) Cover

(A) Increase  
(B) Decrease  
(3) Throttle stop screw