

## IDLE SPEED


Refer to the Safety Precautions on page 110.

The engine must be at normal operating temperature for accurate idle speed adjustment. 10 minutes of stop-and-go riding is sufficient.

1. Remove the right and left side covers (page 86).
2. Remove the mounting bolts (1) and cover (2).
3. Warm up the engine, shift to neutral, and place the motorcycle on its side stand.
4. Adjust idle speed with the throttle stop screw (3).

Idle speed (In neutral):

$1,000 \pm 100 \text{ min}^{-1} (\text{rpm})$

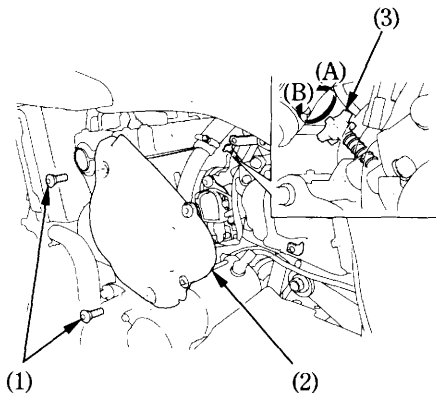

(1) Bolts

(2) Cover

(3) Throttle stop screw

(A) Increase

(B) Decrease