



(20–30 mm) at the end of the brake lever.

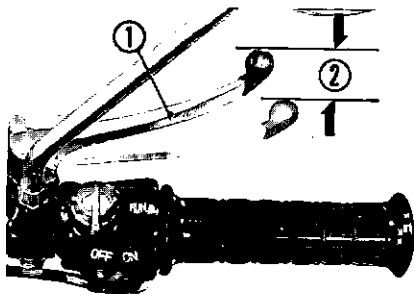

- ① Front brake lever
- ② Free play

2. If the brake requires adjustment, there are two places where this adjustment can be made. Normally the adjustment can be made at the front brake arm ③ on the front brake backing plate. First loosen the lock nut ④ and then turn the front brake adjusting nut ⑤.

Turning the nut ⑥ in the clockwise direction ① will decrease the brake lever free play ② and turning in the counterclockwise direction ② will increase the free play.

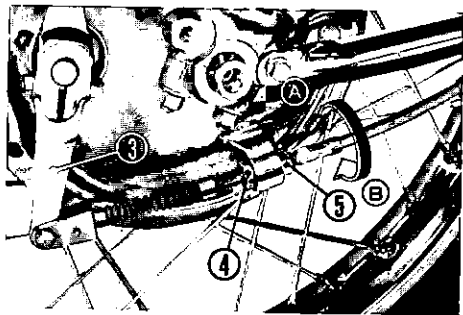

- ③ Front brake arm
- ④ Lock nut
- ⑤ Front brake adjusting nut