


CB750F2 (E)

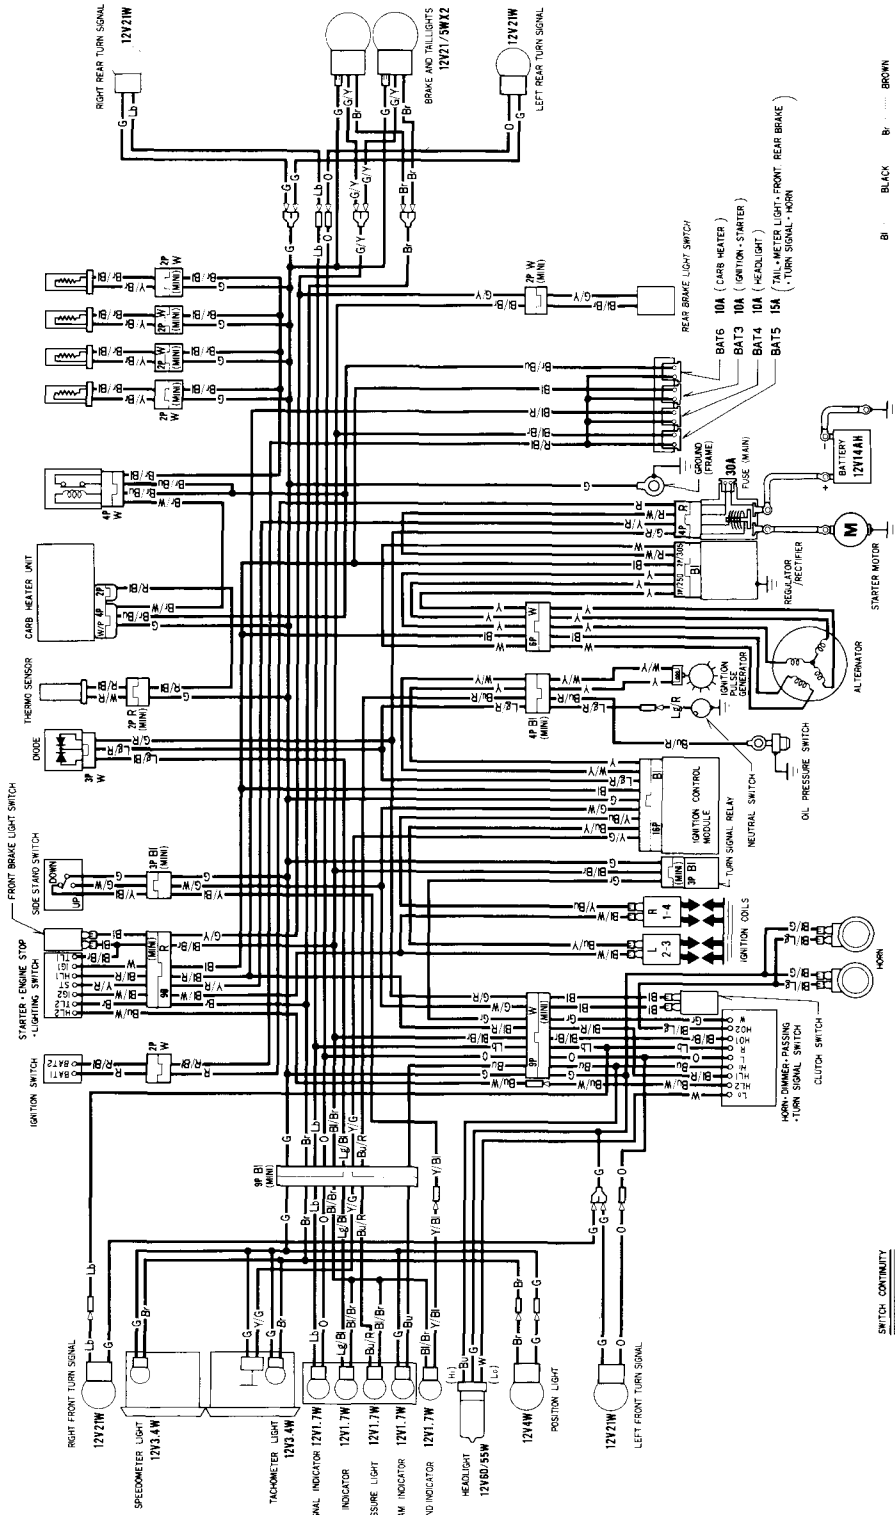

SWITCH CONTINUITY

IGNITION SWITCH	BATT1	BAT2	ON	OFF	COLOR	R / B
ENGINE STOP SWITCH	IG1	IG2	RUN	OFF	COLOR	W / B / W
STARTER SWITCH	IG1	IG2	FREE	PUSH	COLOR	W / Y / R

LIGHTING SWITCH	HL1	HL2	HL1	HL2	COLOR	B / B / B / B / W
TURN SIGNAL SWITCH	L	R	L	R	COLOR	Gr / Ls / O
DIMMER SWITCH	HL2	Ls	Hl	Hl	COLOR	Bu / W / W / Bu

HORN SWITCH	HO1	HO2	FREE	PUSH	COLOR	Bi / B / B / L / G
PASSING SWITCH	HL1	HL2	FREE	PUSH	COLOR	Bi / R / Bu

- B1 BLACK
- B2 BROWN
- Y YELLOW
- O ORANGE
- B3 BLUE
- Ls LIGHT BLUE
- G GREEN
- Lr LIGHT GREEN
- R RED
- P PINK
- W WHITE
- Gr GRAY

0030Z-MW3-9700