

CYLINDER HEAD/VALVES


Compress the valve spring and install the valve cotters.

CAUTION:

To prevent loss of tension, do not compress the valve spring more than necessary.

TOOL:

Valve spring compressor	07757 - 0010000
Attachment	07JME- KY20100
Tapet hole protector	07JMG- KY20100

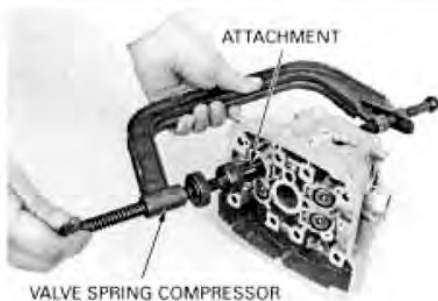

Tap the stems gently with two plastic hammer to firmly seat the cotters.


CAUTION:

Support the cylinder head above the work bench surface to prevent valve damage.



Apply coolant to the new O-ring and install it to the radiator hose joint.

Install the radiator hose joint to the cylinder head and tighten the bolt.

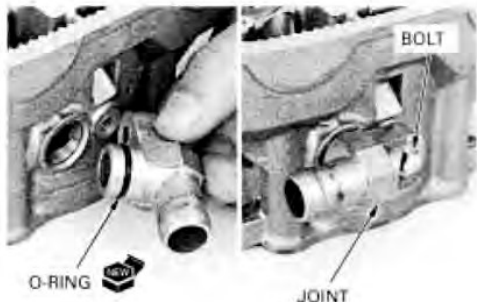

Connect the vacuum tubes.

Install the carburetor insulator to the cylinder head by aligning the insulator groove with cylinder head boss and tighten the insulator band screw.

