

Tighten the fork bottom pinch bolts to the specified torque.

TORQUE: 26 N·m (2.7 kgf·m, 20 lbf·ft)

Tighten the fork top pinch bolt to the specified torque.


TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

Tighten the fork bolt to the specified torque.

TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

Tighten the handlebar pinch bolt.

TORQUE: 27 N·m (2.8 kgf·m, 20 lbf·ft)

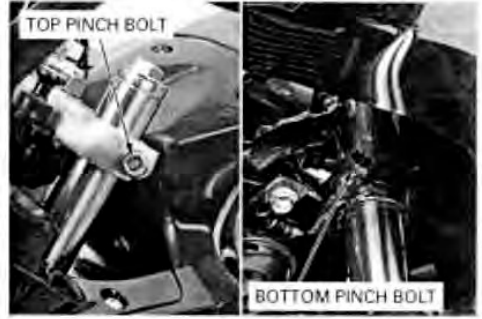

Install the following:

- front fender (page 2-3)
- front wheel (page 14-12)
- brake cariper (page 16-19)

STEERING STEM

REMOVAL

Remove the following:

- handlebars (page 14-3)
- upper cowl (page 2-4)
- front wheel (page 14-8)
- front fender (page 2-3)

Remove the steering stem nut and washer.

Remove the fork (page 14-12).

Remove the top bridge.



Remove the horn stay mounting bolts and horn stay.

