


## Throttle Freeplay

Refer to *Safety Precautions* on page 70 .

### RIGHT HANDLEBAR

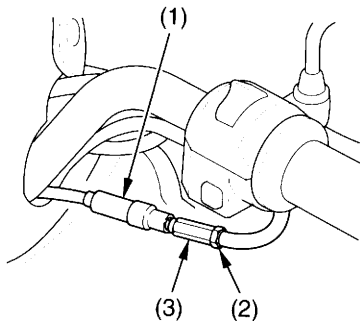

- (1) rubber dust cover      (3) adjuster  
(2) lock nut

### Inspection

Check freeplay at the throttle grip flange.

Freeplay:

1/16—1/4 in (2—6 mm)

If necessary, adjust to the specified range.

### Adjustment

1. Pull back the rubber dust cover (1).
2. Loosen the lock nut (2).
3. Turn the adjuster (3).
4. Tighten the lock nut. Return the dust cover to its normal position.
5. After adjustment, check for smooth rotation of the throttle grip from fully closed to fully open in all steering positions.