

SPARK PLUG

Refer to the Safety Precautions on page 44.

Recommended plugs:

Standard:

DPR8EA – 9 (NGK) or
X24EPR – U9 (DENSO)


For cold climate: (Below 5°C, 41°F)

DPR7EA – 9 (NGK) or
X22EPR – U9 (DENSO)

NOTICE

Never use a spark plug with an improper heat range. Severe engine damage could result.

1. Disconnect the spark plug cap (1) from the spark plug.
2. Clean any dirt from around the spark plug base.
3. Remove the spark plug with the spark plug wrench (2) and handle (3) provided in the tool bag.

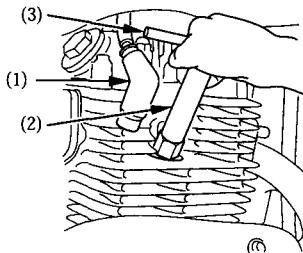

- (1) Spark plug cap
- (2) Spark plug wrench
- (3) Handle