


3. Remove the air cleaner element plate ③ and remove the air cleaner element ④.
4. Wash the element in clean stoddard solvent and dry thoroughly.
5. Soak the element in clean gear oil (SAE 80~SAE 90) until it is saturated. Then squeeze to remove excess oil.
6. Install the element.
7. Install the element plate and install the air cleaner case cover with the three screws.
8. Install the left number plate.

WARNING: Gasoline or low flash point solvents are highly flammable and must not be used to clean the air cleaner elements.

NOTE: When the motorcycle has been operated in extremely dusty conditions or deep mud and water, check the air cleaner for condition carefully.

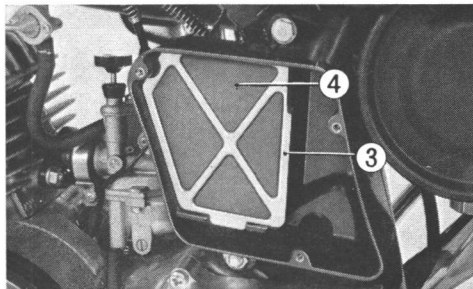

- ③ Air cleaner element plate
- ④ Air cleaner element