


that a new master link retaining clip be installed whenever the drive chain is reassembled.

6. Adjust the drive chain to the proper tension, following the instructions on pages 47~49.

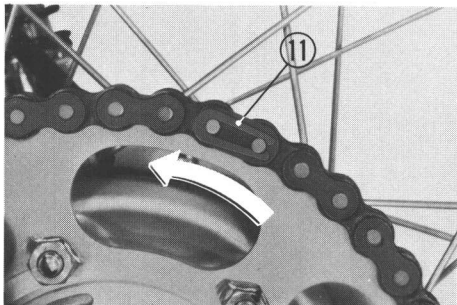


⑪ Retaining clip

Front Brake Adjustment

Free play, measured at the tip of the front brake lever ①, should be maintained at **0.8–1.2 in. (20–30 mm)**. Free play is the distance the brake lever moves before the brake starts to engage.

Major adjustments should be made using the adjuster located at the front wheel.

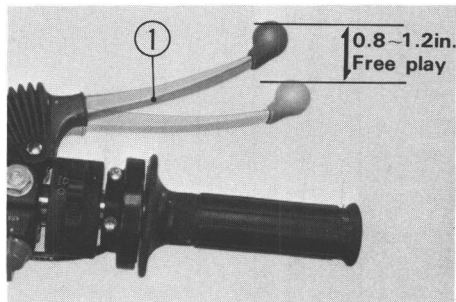

① Front brake lever