


## REAR BRAKE

### Adjustment:

1. Place the motorcycle on its center stand.
2. The stopper bolt (1) is provided to allow adjustment of the pedal height.  
To adjust the pedal height, loosen the lock nut (2) and turn the stopper bolt. Tighten the lock nut.
3. Measure the distance the rear brake pedal (3) moves before the brake starts to take hold.

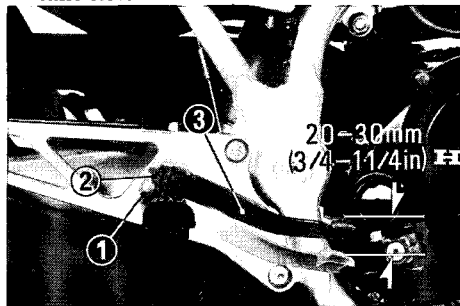

(1) Stopper bolt


(3) Rear brake pedal

(2) Lock nut

Free play should be 20—30 mm (3/4—1-1/4 in). If adjustment is necessary, turn the rear brake adjusting nut (4).

### NOTE:

- \* Make sure the cut-out on the adjusting nut is seated on the brake arm pin.
- \* If proper adjustment cannot be obtained by this method, see your authorized Honda dealer.

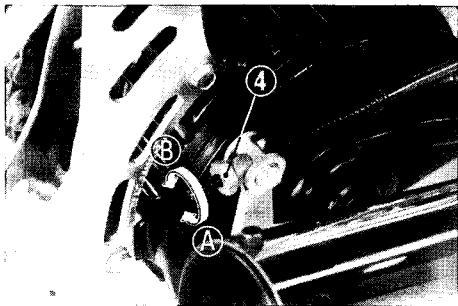

(4) Adjusting nut

(A) Decrease free play

(B) Increase free play