



## Rear Brake Adjustment

Rear brake pedal free play, measured at the tip of the rear brake pedal ①, should be maintained at **0.8–1.2 in. (20–30 mm)**. Free play is the distance the brake pedal moves before the brake starts to engage.

Adjust the pedal free play by turning the rear brake adjusting nut ②. Turning the adjusting nut in direction **A** will decrease the brake pedal free play and turning the nut in direction **B** will increase the free play.

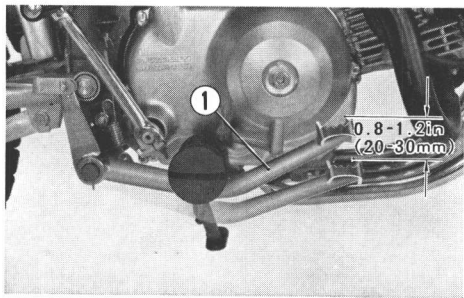

① Rear brake pedal

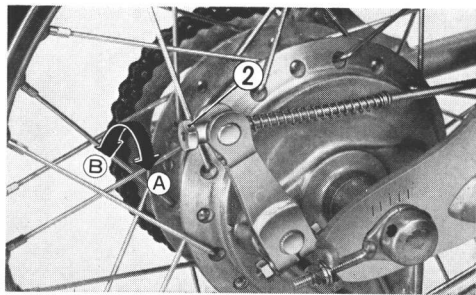

② Rear brake adjusting nut