


Measure the clearance (6) between each surface of the left brake disc (7) and the left caliper holder (8) with a 0.7 mm (0.028 in) feeler gauge (9) (see sketch). If the gauge inserts easily, tighten the right and left axle pinch bolts (5) to the specified torque.

Axle pinch bolt torque:

22 N·m (2.2 kg·m, 16 ft·lb)

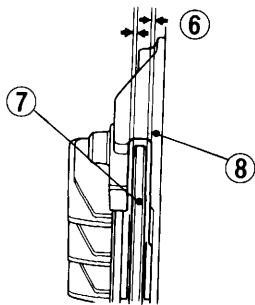


(6) Clearance
(7) Brake disc

(8) Caliper holder

⚠ WARNING

- * **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.**

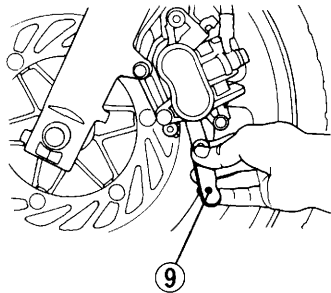

(9) Feeler gauge