


5. Turn the seat over.
6. Install the rear seat cover (6) to the seat.
7. Fit the stopper holes (7) of rear seat cover securely into the pins (8).
8. Install the seat properly (page 58).

The grab rails must be returned to position when riding in tandem.

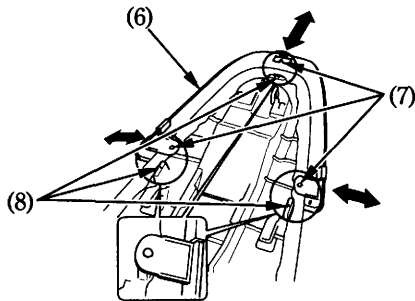

- (6) Rear seat cover
- (7) Stopper holes
- (8) Pins

Removal:

1. Removal can done in the reverse order of installation.

Tighten the grab rail mounting bolts (2) securely.

Grab rail mounting bolts torque:
22 N·m (2.2 kgf·m , 16 lbf·ft)

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. The grab rail could come off easily and result in serious injury if the assembly is not made properly.

2. Install the seat properly (page 58).