


8. Tighten the axle pinch bolts on the right fork leg to specified torque:

22 N·m (2.2 kgf·m , 16 lbf·ft)

- Visually check that the clearances between each surface of the brake disc and the brake bracket (not the brake pads) are symmetrical.

9. Install the speed sensor and tighten the screw securely.

If the torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

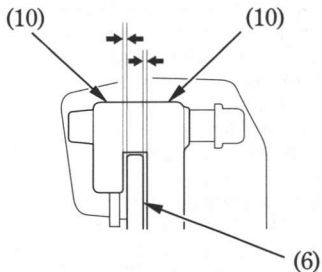

(6) Brake disc

(10) Brake bracket