


Engine Oil & Filter

Checking & Adding Oil

Refer to Safety Precautions on page 62.

RIGHT SIDE

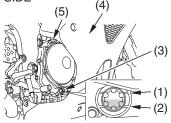

- (1) upper level mark
- (2) lower level mark
- (3) oil level inspection window
- (4) lower fairing
- (5) oil filler cap
- 94 Servicing Your Honda

- 1. Park your motorcycle on its side stand on a firm, level surface.
- 2. Start the engine and let it idle for 3-5 minutes. Make sure the low oil pressure indicator goes off. If the indicator remains on, stop the engine immediately.
- 3. Stop the engine and wait 2-3 minutes.
- 4. Hold the motorcycle in an upright position.

