
## **Drive Chain**

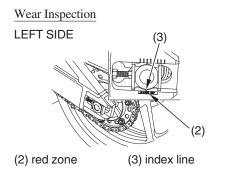

Check the chain wear label when adjusting the chain. If the red zone (2) on the label aligns with the index line (3) on the chain adjuster plates after the chain has been adjusted to the proper slack, the chain is excessively worn and must be replaced. The proper slack is: 1-1 3/8 in (25-35 mm)

## 142 Servicing Your Honda

The bottom part of the frame may be damaged by excessive drive chain slack of more than: 1 15/16 in (50 mm)

## Adjustment

Refer to Safety Precautions on page 62.

Drive chain slack should be checked and adjusted, if necessary, every 500 miles (800 km). When operated at sustained high speeds or under conditions of frequent rapid acceleration, the chain may require more frequent adjustments.

